PREMIER®

MANUAL DE INSTRUCCIONES
SARTÉN ELÉCTRICO
ED-5232

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

INSTRUCCIONES DE SEGURIDAD 2
INSTRUCCIONES DE OPERACIÓN 2
PRECAUCIONES 3
REGULADOR DE TEMPERATURA 3
LIMPIEZA Y MANTENIMIENTO 4
DIAGRAMA DE CIRCUITOS 4

PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

⚠ INSTRUCCIONES DE SEGURIDAD

- No toque la superficie caliente. Utilice únicamente las manijas.
- Para evitar el riesgo de choque eléctrico, verifique la unidad con frecuencia en cuanto a daños en el cable, el enchufe o la unidad misma. En caso de presentarse algún daño no utilice la unidad y consulte a un técnico calificado.
- Mantenga la unidad fuera del alcance de los niños.
- No sumerja la unidad, el cable o el enchufe en agua u otros líquidos.
- No utilice accesorios que no vengan con la unidad o no sean recomendados por el fabricante.
- No coloque la unidad sobre o cerca de placas calientes o cualquier objeto calefactor, explosivo o de gas.
- No transporte la unidad de un lugar a otro mientras está aún funcionando. Se debe tener precaución si el sartén contiene aceite caliente.
- Coloque el regulador a la temperatura deseada antes de conectarlo.
- La unidad sólo debe ser utilizada a nivel doméstico y para el propósito para el que fue diseñada.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

INSTRUCCIONES DE OPERACIÓN

Antes de utilizar la unidad por vez primera limpie la placa de calefacción.

1. Coloque el controlador de temperatura en la posición de apagado y conéctelo en la unidad.
2. Conecte el enchufe de controlador al tomacorriente.
3. Ajuste la temperatura según la necesidad. La luz indicadora se enciende cuando la unidad esté calentando.

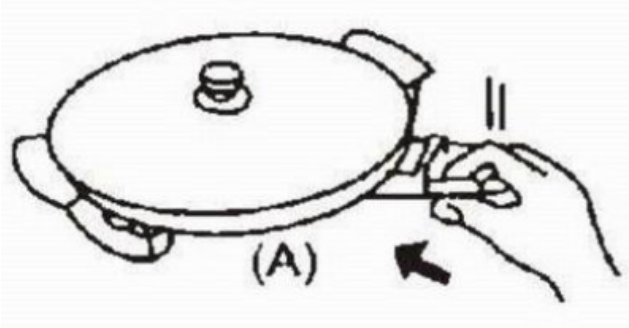

COCINAR

1. Después de encender el sartén espere de 5 a 10 minutos. Tan pronto como la luz indicadora se encienda, puede comenzar a cocinar.
2. Cuando los alimentos estén listos, usted aún puede conservar la temperatura del sartén colocando el regulador en la posición “mantener caliente”.

Nota

- Si la luz indicadora se apaga, el regulador de temperatura automático seguirá funcionando. Esto no es un error.
- Si escucha un ruido probablemente se deba a la placa de calefacción que se expande y se contrae.
- No coloque las manos debajo del reflector y no coloque materiales inflamables en el sartén.

DESPUÉS DE USAR

1. Coloque el regulador de temperatura en la posición de apagado.
2. Desconecte el cable de poder del tomacorriente y el regulador de temperatura de la unidad.
3. Una vez se enfríe, limpie el regulador con una prenda seca y suave.

Nota

Como la punta del regulador de temperatura se calienta bastante al estar en uso, permita que la placa de calefacción se enfríe antes de retirar el regulador.

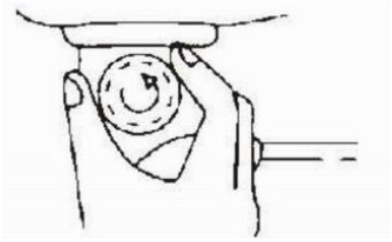

PRECAUCIONES

La superficie de la placa de calefacción es anti-adherente. Por lo tanto, tenga en cuenta lo siguiente:

- No utilice objetos metálicos ni puntiagudos.
- No utilice cuchillos para cortar los alimentos sobre la superficie.
- No coloque el regulador de temperatura en la placa de calefacción.
- No toque la placa de calefacción.
- No utilice objetos abrasivos hechos de nylon o metal ya que pueden rayar la superficie.
- La placa debe ser limpiada con una prenda húmeda.
- Evite que se acumulen restos de alimentos obrase la superficie ya que podrían quemarse.

REGULADOR DE TEMPERATURA

- El regulador automático de temperatura es una parte de alta sensibilidad, por lo cual debe ser manejada con precaución evitando que sea golpeada.
- Utilice únicamente el regulador de temperatura suministrado con esta unidad.
- Inserte el regulador de temperatura en el lugar adecuado. Cuando no retire, no hale del cable sino del conector.
- Si el regulador de temperatura presenta algún daño, no lo utilice y llévelo a personal de servicio técnico calificado.
- Antes de conectar o desconectar el regulador de temperatura, asegúrese de que está en la posición de apagado, y que el enchufe está desconectado.

LIMPIEZA Y MANTENIMIENTO

Parte	Método	Observación
Placa de calefacción	Limpie la placa de calefacción después de utilizarla con una toalla húmeda o papel suave, cuando aún esté tibia (pero no caliente). Si los residuos son difíciles de quitar, aplique un poco de agua en la placa y enciéndala. La placa se calentará y los residuos serán más fáciles de quitar.	No utilice detergente ni cepillos de nylon o metal para evitar rayar la placa. No coloque la placa de calefacción en agua cuando aún esté caliente.
Bordes	Después de enfriarse, cubra el marco con la mano para evitar que el agua entre, y limpie la placa de calefacción con una esponja suave y un poco de detergente.	
Cubierta	Limpie con una esponja suave y un poco de detergente.	No utilice thinner, benzina o químicos fuertes para dañar el acabado.
Regulador de temperatura	Limpie con papel suave o una toalla suave y seca	Asegúrese de que esta pieza quede totalmente seca, especialmente la punta para evitar el riesgo de choque eléctrico.

DIAGRAMA DE CIRCUITOS

Voltaje AC 220V 50/60Hz
Potencia 1500W

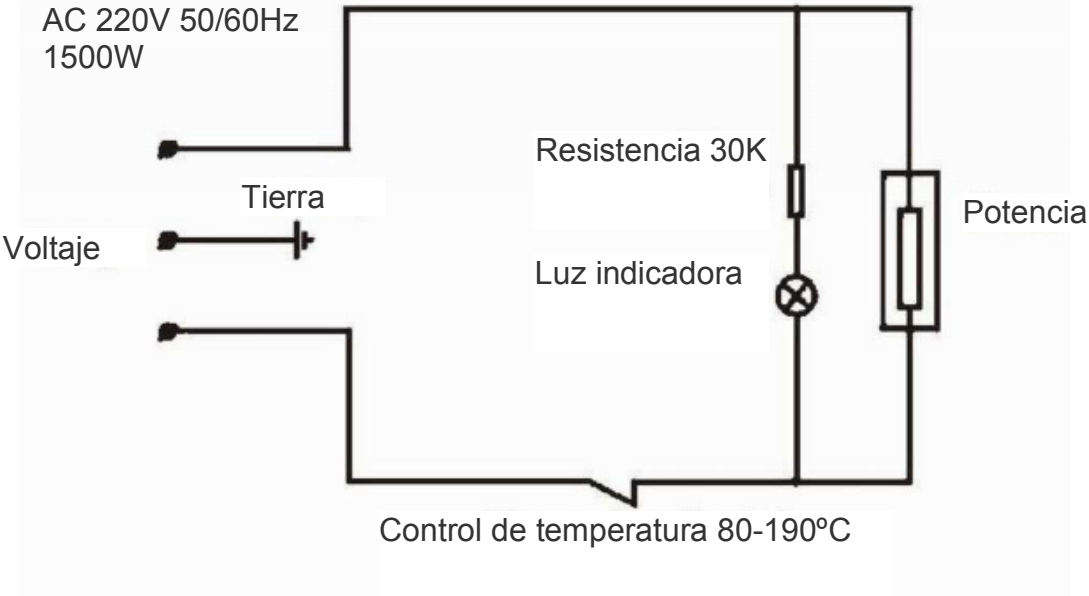

- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.

PREMIER®

INSTRUCTION MANUAL
ELECTRIC SKILLET
ED- 5232

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to *info@premiermundo.com*

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

General safety instructions

USING ELECTRICAL APPLIANCE YOU MUST ACT IN COMPLIANCE WITH THE FOLLOWING INSTRUCTIONS

- Read the instructions carefully before use.
- Never touch the hot surface; only use the handles.
- To avoid an electrical shock, check the appliance regularly for damages to the appliance, the cable or plug. If damages are found, do not use the appliance but bring it in for repair to a qualified technician.
- Take extra care in the presence of children; never leave the working appliance with children without supervision.
- Never immerge the appliance, cable or plug into water or any other liquid.
- Do not use any parts that are not delivered with the original pan; this might cause danger.
- Never place the appliance on or near a hot plate or any other heating object, explosive or gas.
- Never carry the appliance while still working: extra care must be taken if the pan contains hot oil or fat.
- Turn the regulator to the required temperature before you plug in.
- The appliance should only be used in domestic environment and for the use that it has been designed for.

THESE INSTRUCTIONS MUST BE FOLLOWED.

AUTOMATIC TEMPERATURE REGULATOR
THE RIGHT TEMPERATURE WILL BE KEPT AT THE SET TEMPERATURE

OPERATION INSTRUCTIONS

RIGHT CONSTRUCTION: BEFORE USING CLEAN THE HEAT PLATE AND COVER COMPLETELY

1). PUT THE TEMPERATURE SCALE TO "OFF" POSITION AND PUT THE AUTOMATIC TEMPERATURE REGULATOR IN THE INLET.

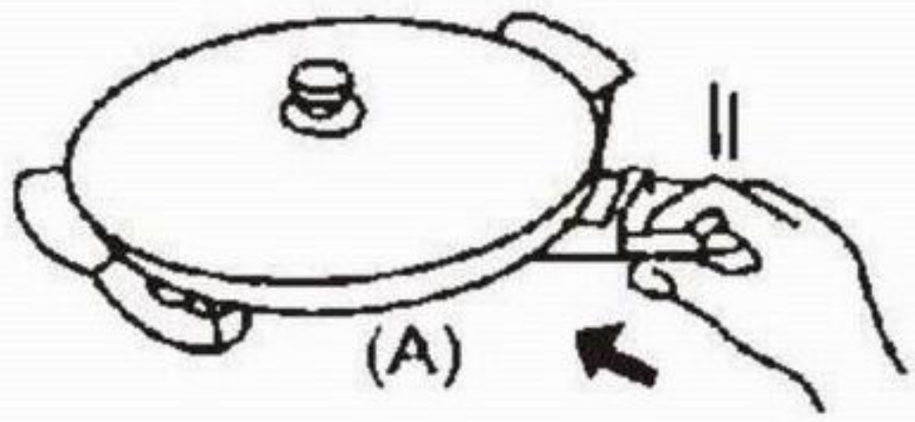

2). PUT THE PLUG INTO AN EARTHED 220V SOCKET

3).THE TEMPERATURE SCALE CAN BE SET IN ACCORDANCE WITH THE FOOD; THE CONTROL LAMP IS ON TO SHOW THE PAN IS HEATING.

COOKING

1). AFTER THE PAN HAS BEEN TURNED ON, WAIT 5-10 MINUTES,: AS SOON AS THE CONTROLLAMP WILL LIGHT, YOU CAN START COOKING.

2). IF THE FOOD IS COMPLETELY DONE, THE TEMPERATURE CAN BE KEPT BY PUTTING THE TEMPERATURE SCALE TO 'WARMKEEP'.

- If the lamp goes off, this is not an error, the automatic temperature regulator is in function.
- If there is some noise, this is not an error: the noise comes from the heater and the heat plate
- Do not put your hand under the reflector; do not put any inflammable material on the pizza pan.

3. after use

1) After use put the temperature scale to OFF

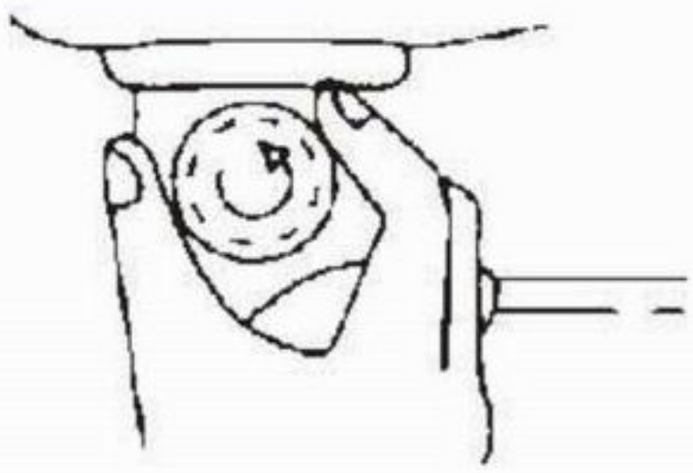

2) Pull the plug out of the socket, and then take out the automatic temperature regulator from the heat plate

Caution: Because the temperature leader of the temperature regulator is very hot after using the heat plate, let the heat plate cool down before pulling it out.

3) After cooling down, clean the temperature regulator with a dry and soft cloth.

Caution measures to be taken by operating the heat plate

The surface of the heat plate is non-stick, so take care as following:

- Do not use sharp objects made of metal.
- **Do not use a sharp knife to cut the food on the surface.**

- Do not put the automatic temperature regulator on the heat plate.
- It is not permitted to touch the heat plate.
- Do not use cleaner, nylon brush or metal brush, the surface of the heat plate would be damaged.
- The plate must be cleaned after using with a wet cloth. Food rests or fat on the surface will lead to fire

SAFETY MEASURES AND PROPOSALS

In order to avoid shock, fire or functions errors, the following caution measures must be followed.

- The power input must be 220V;
- The cable is not permitted to be curved and must be undamaged.
- Do not use the cable to pull the plug out of the socket.
- Do not immerge the heat plate into water.
- After cleaning, the appliance must be dry, and then you can re-use it.

The heat plate is not allowed to be used in the following places.

- On an unsteady place or on inflammables surface (newspaper, paper, pvc-tablecover carpet etc.)
- The hotplate must be min .15cms far from the wall or other objects.

THE AUTOMATIC TEMPERATURE REGULATOR

- The automatic temperature regulator is a high sensitive part, so handle with care; prevent falling or shock.
- Only use the automatic temperature regulator supplied with this appliance
- Insert the automatic temperature regulator in the right place. If you pull out the automatic temperature regulator, do not use the cable but use the connector of the automatic temperature regulator and pull it out.
- If the automatic temperature controller is damaged, stop using it; bring it in for repair by a qualified technician.
- Before inserting or pulling the automatic temperature controller, make sure it is in the OFF position and the plug is not in the supply socket.

CLEANING

CLEAN THE PAN AFTER USE AS FOLLOWS:

NAME	METHOD	REMARK
Heating plate	Clean the heating plate after use with a wet towel or soft paper, when it is still warm (not hot). If the residues are difficult to clean, put a little water on the plate and turn it. The plate will be heated and the residues can be rubbed away.	1. Do not use any detergent, nylon brush or metal brush; the heating plate will be damaged. 2. Do not put the heating plate into water when the heating plate is still hot.
Redundant dirt	After cooling, cover the frame with hand to avoid water come inside, and clean the heating plat with a soft sponge and some detergent	
Cover	Clean with soft sponge and a little detergent	Do not use any thinner, benzene, detergent or chemical disposed towel: otherwise the surface will be damaged.
Automatic Temperature Controller	Clean with soft paper or dry soft towel	Do not clean the discreteness of the automatic temperature controller ,otherwise it will get an electric shock or be on fire
After cleaning the pizza pan, dry it carefully with a soft towel. After drying daub it with layer of cooking oil.		

SCHEMATIC DIAGRAM

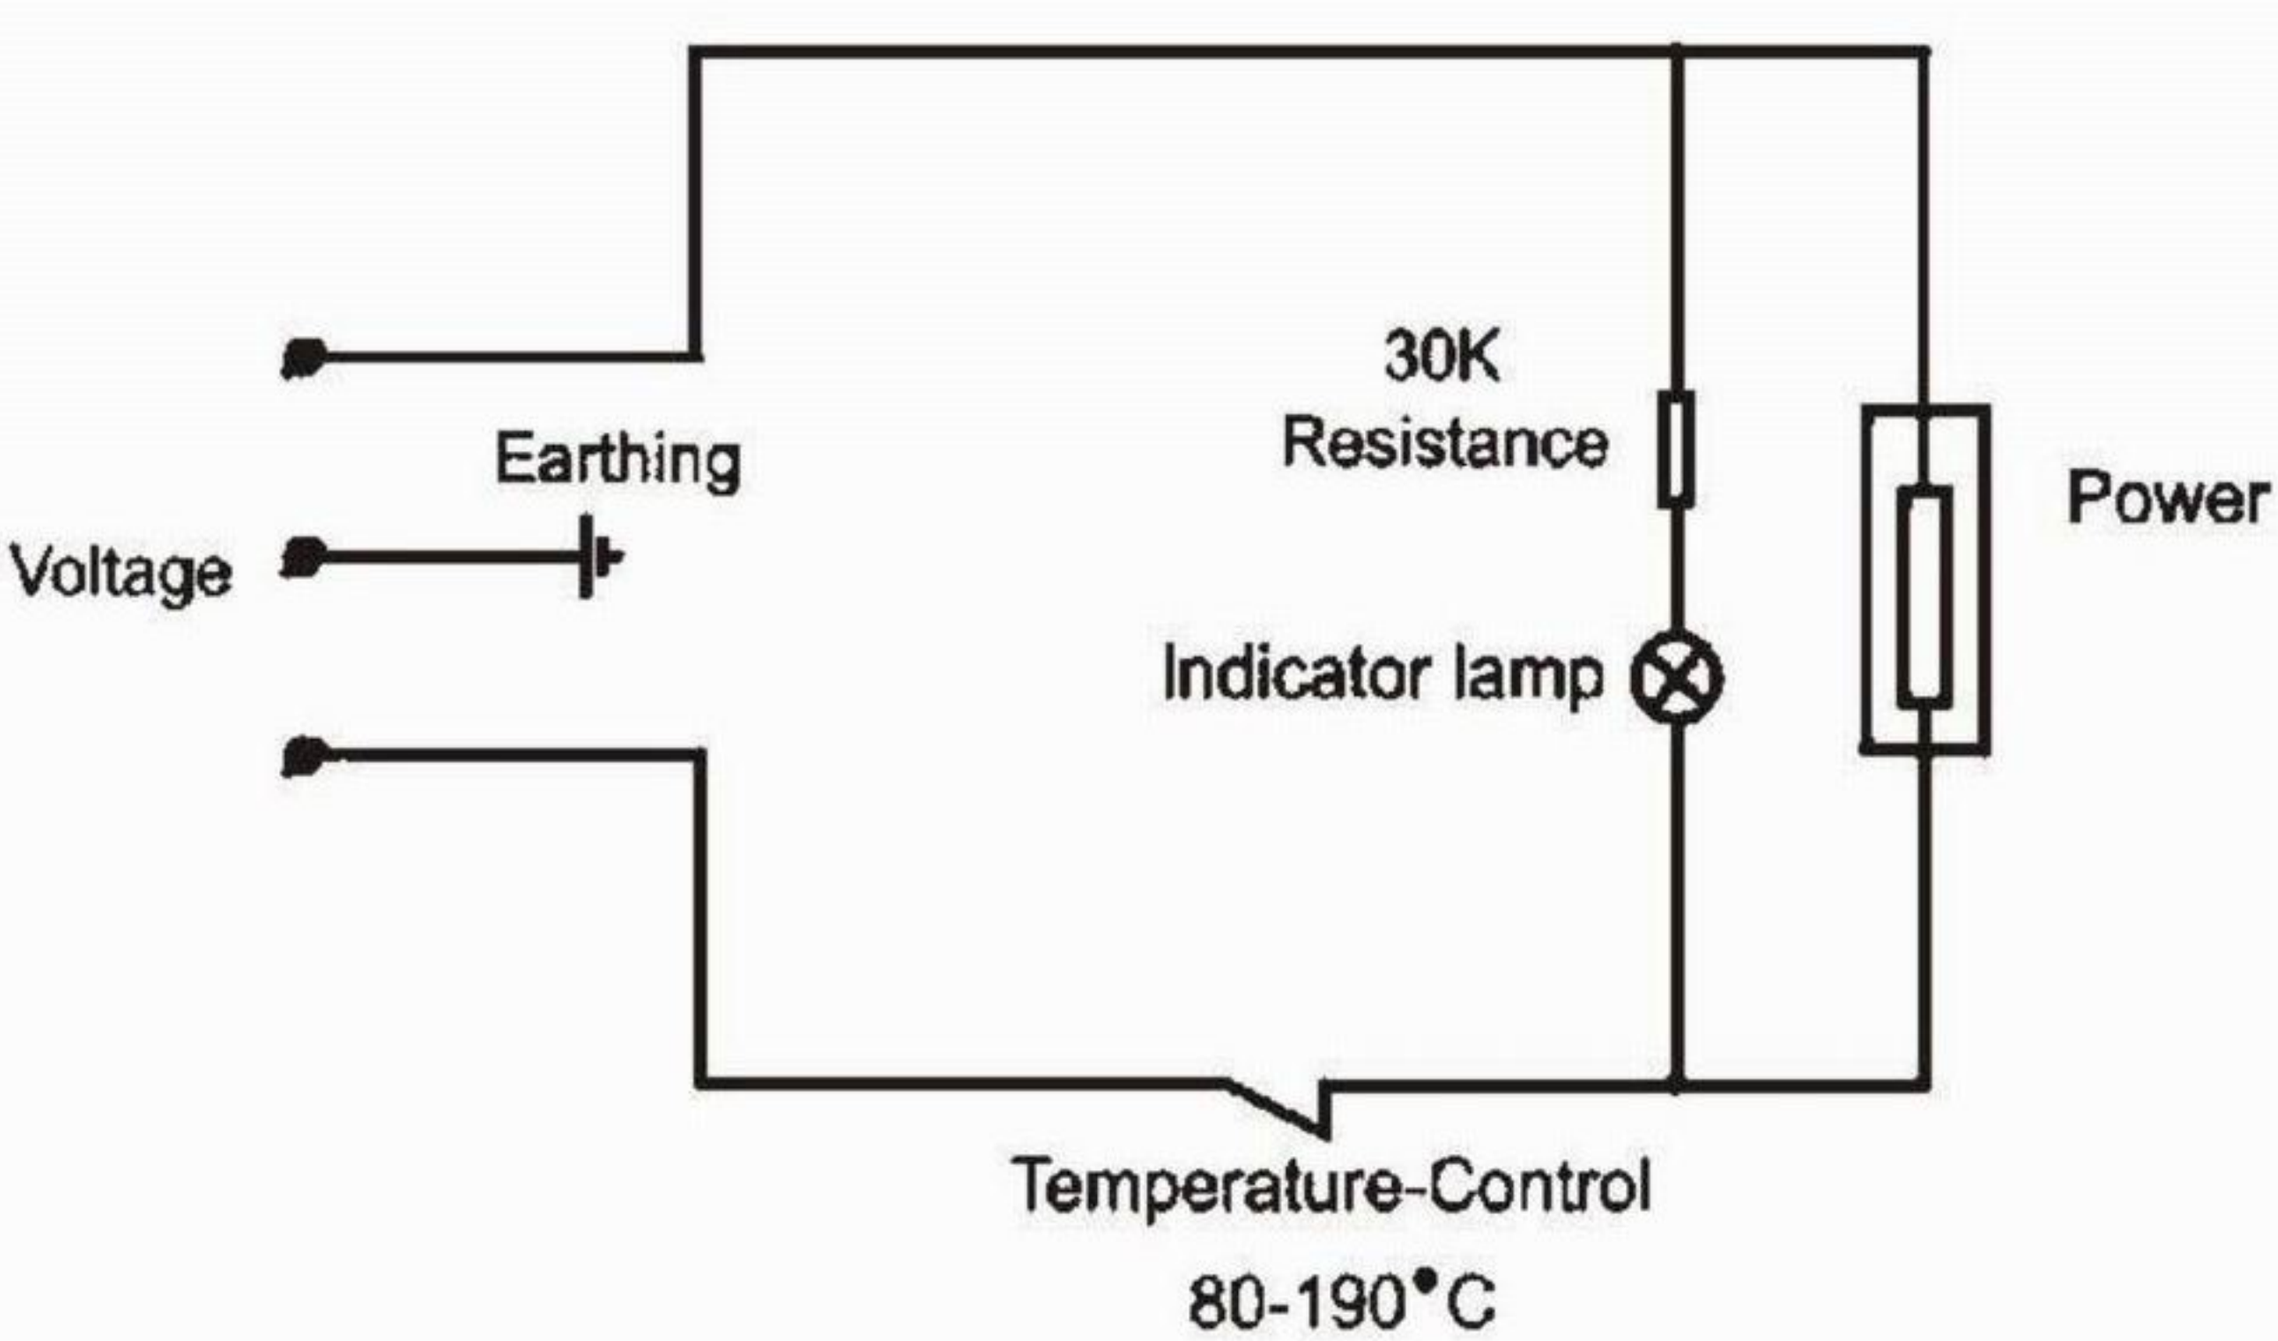

POWER : AC220V 50/60Hz 1500W